
 
 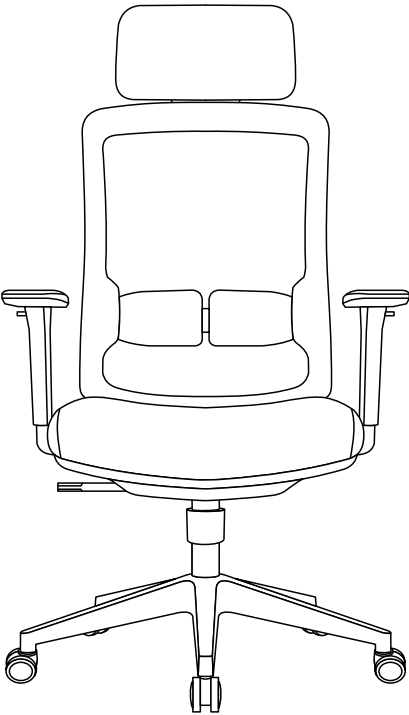
 


INSTALLATION DIAGRAM

LM-188A



Partslist		Qty
A		5PCS
B		1PC
C		1PC
D		1PC
E		1PC
F		2PCS
G	 (1)  (2)	2PCS
H		1PC
I	 M6x16mm	2PCS
J	 M6x25mm 	4PCS
K	 M6x30mm 	6PCS
L	 M8x20mm  	3PCS
M	 M5	1PC

